

Audi > R8 > 2008

Electrical Equipment

94 - Removal and Installation

.

Front Side Marker Lamps


Side marker lamp function via LED which cannot be serviced or replaced separately. Should LED malfunction, replace entire side marker lamp housing LED array.

Removing

CAUTION!


- ◆ **Switch off all electrical consumers.**
- ◆ **Switch ignition off and remove ignition key.**

- Turn light switch to "0" position.

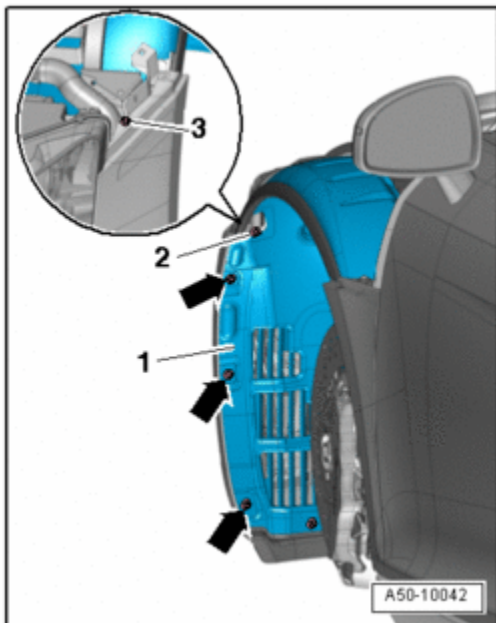

- Remove screws - **arrows** - .


- Move loosened part of wheel housing liner - **1** - to side.

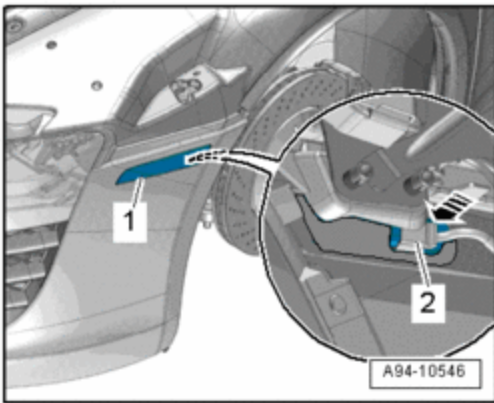

- Reach behind bumper cover and press light - **1** - out of bumper cover - **arrow** - .
- Disconnect electrical connection - **2** - .

Installing

Install in reverse order of removal, noting the following:

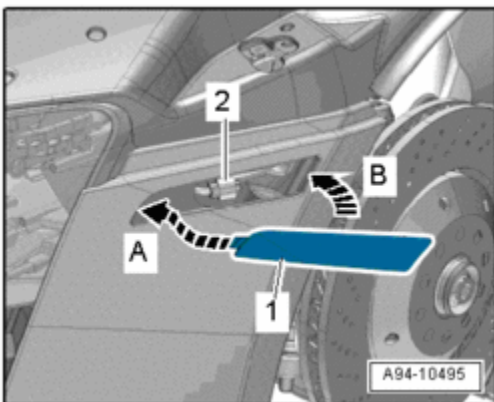

- Insert guide in mount on bumper cover - **arrow A** - .
- Connect electrical connection - **2** - and press cornering light - **1** - into bumper cover until it engages audibly - **arrow B** - .
- Install screws for front wheel housing liner ⇒ Body Exterior - Repair Group 66 .

Copyright © 2008 Audi of America, Inc. and Bentley Publishers. All rights reserved. Last processed: